


Enter the Weight fo your Ferilizer Lbs/Cu ft : 80

GROUND DRIVE RATE CHART

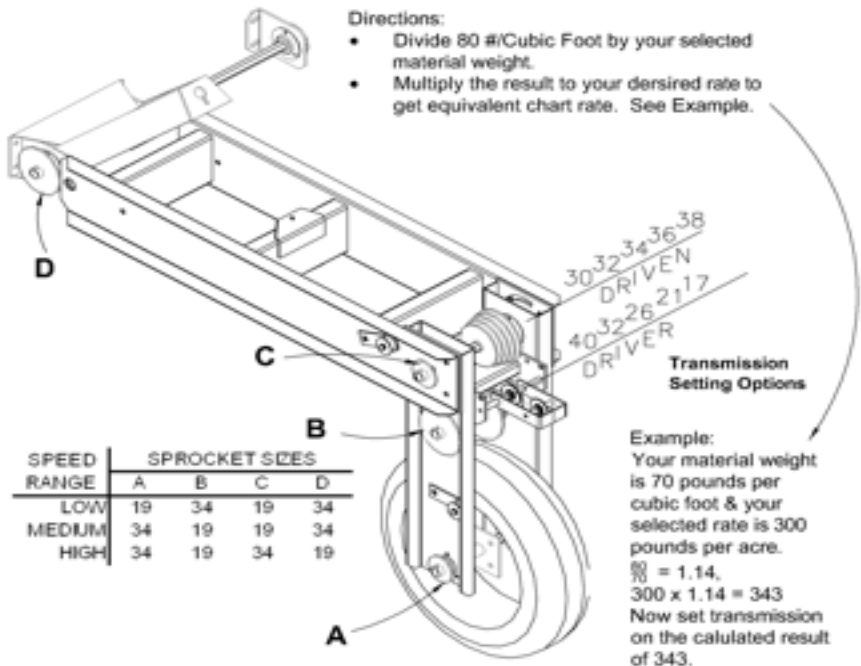

Directions:

- Divide 80 #/Cubic Foot by your selected material weight.
- Multiply the result to your dersired rate to get equivalent chart rate. See Example.

Example:
Your material weight is 70 pounds per cubic foot & your selected rate is 300 pounds per acre.
 $\frac{80}{70} = 1.14$
 $300 \times 1.14 = 343$
Now set transmission on the calulated result of 343.

SPEED RANGE	SPROCKET SIZES			
	A	B	C	D
LOW	19	34	19	34
MEDIUM	34	19	19	34
HIGH	34	19	34	19

TRANSMISSION SETTING		LOW RANGE ROW SPACING									MEDIUM RANGE ROW SPACING									HIGH RANGE ROW SPACING								
DRIVER	DRIVEN	30	32	34	36	36	38	40	44	48	30	32	34	36	36	38	40	44	48	30	32	34	36	36	38	40	44	48
	38	86	81	76	72	72	68	65	59	54	259	243	229	216	216	205	194	177	162	702	658	619	585	585	554	527	479	439
	36	91	86	80	76	76	72	68	62	57	272	255	240	227	227	215	204	186	170	748	701	660	623	623	590	561	510	467
17:	34	97	91	86	81	81	77	73	66	61	287	269	253	239	239	226	215	196	179	793	744	700	661	661	626	595	541	496
	32	102	96	90	85	85	81	77	70	64	300	281	265	250	250	237	225	205	188	839	786	740	699	699	662	629	572	524
	30	108	101	95	90	90	85	81	74	68	314	295	277	262	262	248	236	214	197	884	829	780	737	737	698	663	603	553
	38	103	97	91	86	86	81	77	70	65	304	285	268	253	253	240	228	207	190	839	839	839	699	699	662	662	662	662
	36	109	102	96	91	91	86	82	74	68	322	302	284	268	268	254	241	219	201	895	895	895	746	746	707	707	707	707
21:	34	115	108	102	96	96	91	86	79	72	338	317	299	282	282	267	254	231	212	952	952	952	793	793	751	751	751	751
	32	122	115	108	102	102	97	92	83	77	356	334	314	297	297	281	267	243	223	1008	1008	1008	840	840	796	796	796	796
	30	128	120	113	107	107	101	96	88	80	374	351	330	312	312	296	281	255	234	1064	1064	1064	887	887	840	840	840	840
	38	132	124	116	110	110	104	99	90	83	353	331	311	294	294	279	265	241	221	1073	1073	1073	894	894	847	847	847	847
	36	139	131	123	116	116	110	104	95	87	374	351	330	312	312	296	281	255	234	1142	1142	1142	952	952	902	902	902	902
26:	34	146	137	129	122	122	116	110	100	92	396	371	349	330	330	313	297	270	248	1212	1212	1212	1010	1010	957	957	957	957
	32	154	144	136	128	128	121	115	105	96	418	392	368	348	348	330	313	285	261	1282	1282	1282	1068	1068	1012	1012	1012	1012
	30	161	151	142	134	134	127	121	110	101	439	412	388	366	366	347	329	299	275	1351	1351	1351	1126	1126	1067	1067	1067	1067
	38	156	146	138	130	130	123	117	106	98	434	407	383	362	362	343	326	296	272	1284	1284	1284	1070	1070	1014	1014	1014	1014
	36	166	155	146	138	138	131	124	113	104	460	431	406	383	383	363	345	313	287	1369	1369	1369	1141	1141	1081	1081	1081	1081
32:	34	175	164	155	146	146	138	131	119	110	485	455	428	404	404	383	364	331	303	1454	1454	1454	1212	1212	1148	1148	1148	1148
	32	185	173	163	154	154	146	139	126	116	511	479	451	426	426	404	383	349	320	1540	1540	1540	1283	1283	1215	1215	1215	1215
	30	194	182	172	162	162	153	146	133	122	536	503	473	447	447	423	402	366	335	1625	1625	1625	1354	1354	1283	1283	1283	1283
	38	186	174	164	155	155	147	140	127	116	518	486	457	432	432	409	389	353	324	1704	1704	1704	1420	1420	1345	1345	1345	1345
	36	199	187	176	166	166	157	149	136	125	550	515	485	458	458	434	412	375	344	1812	1812	1812	1510	1510	1431	1431	1431	1431
40:	34	212	199	187	177	177	168	159	145	133	582	546	514	485	485	459	437	397	364	1920	1920	1920	1600	1600	1516	1516	1516	1516
	32	226	212	199	188	188	178	169	154	141	613	575	541	511	511	484	460	418	383	2028	2028	2028	1690	1690	1601	1601	1601	1601
	30	239	224	211	199	199	189	179	163	149	646	605	570	538	538	510	484	440	404	2136	2136	2136	1780	1780	1686	1686	1686	1686